



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU/BACK	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VCR/DBS	/ SOURCE
FIND	-/--
<< >>	
SIGNAL	
MULTIFEED	
WHITE/EDIT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK/LIST	OK
RECALL	BACK
TV/DBS	TV/DTV
INFO	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED / PAUSE	RED
GREEN / ZOOM	GREEN
YELLOW / T/TEXT	YELLOW
BLUE / TIMER	BLUE
AUDIO	SHIFT+MUTE
F1	SHIFT+1
F2	SHIFT+2
F3	SHIFT+3
SAT	SHIFT+7
PIP	SHIFT+
SUB TITLE	SHIFT+
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
TV/RADIO	SHIFT+ TV/DTV
	SHIFT+EPG

