



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI	/ AV
FILE LIST	-/--
ZOOM	
LANG.	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
AUTO	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
DEV. LIST	SHIFT+ -/--
SUBTITLE	SHIFT+
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
PAGE DOWN	SHIFT+ DOWN
PAGE UP	SHIFT+ UP
STOP	SHIFT+
REC	SHIFT+ RED
REW	SHIFT+ GREEN
PLAY / PAUSE	SHIFT+ YELLOW
FWD	SHIFT+ BLUE

