



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
INFO	INFO
GUIDE	EPG
FAV	FAV
RED / F1	RED
GREEN / F2	GREEN
YELLOW / F3	YELLOW
BLUE / F4	BLUE

[illegible]