



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
NTSC/PAL	-/--
VIDEO TEXT	
VOL +	VOL +
VOL -	VOL -
CH +	P +
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV/RADIO	TV/DTV
INFO	INFO
GUIDE	EPG
FAV	FAV
PAUSE	
RED	RED
GREEN	GREEN

[illegible]