



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FILELIST	-/--
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
i	INFO
GUIDE	EPG
PORTAL	FAV
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
MEDIA	SHIFT+6
SUBT.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
<	SHIFT+LEFT
>	SHIFT+RIGHT
HELP	SHIFT+INFO
PLAYLIST	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

