



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PVR	
VOL+	VOL+
VOL -	VOL -
PAGE+	P+
PAGE -	P -
UP/CH+	UP
DOWN/CH -	DOWN
LEFT/VOL -	LEFT
RIGHT/VOL+	RIGHT
OK	OK
RECALL	BACK
TV/R	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED/F2	RED
GREEN/F1/APP	GREEN
YELLOW/F3	YELLOW
BLUE/F4/R. LIST	BLUE

[illegible]