



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
LIST	-/--
/ MOVIE	
WIDE	
TEXT	
VOL+	VOL+
VOL -	VOL -
PAGE+	P+
PAGE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
/ SWAP	SLEEP
/ TV/RADIO	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
G	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
?	SHIFT+MUTE
OPT+	SHIFT+MENU
/ PIP	SHIFT+
	SHIFT+
PIP CH+	SHIFT+ P+
PIP CH -	SHIFT+ P -
	SHIFT+LEFT
	SHIFT+RIGHT
STEP	SHIFT+OK
A - B	SHIFT+BACK
	SHIFT+EPG
	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

