



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
APP	
TEXT	
V+	VOL+
V-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV / RADIO	TV/DTV
i	INFO
GUIDE	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW

[illegible]