



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
LIST	-/--
MEDIA	
WIDE	
OPT+	
TEXT	
VOL+	VOL+
VOL -	VOL -
P/PAGE+	P+
P/PAGE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
V – FORMAT	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
?	SHIFT+MUTE
PVR	SHIFT+1
TV	SHIFT+2
DVD	SHIFT+3
AUDIO	SHIFT+4
SCHEDULE	SHIFT+
	SHIFT+
	SHIFT+
SUB.	SHIFT+
/ SKIP NEXT	SHIFT+ P+
/ SKIP PREV	SHIFT+ P -
STEP	SHIFT+SLEEP
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+LUE

