



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
→ / TV / AV	→ / AV
-/--	-/--
[Icon: Square]	[Icon: Square]
[Icon: Hourglass]	[Icon: Hourglass]
[Icon: Line graph]	[Icon: Line graph]
[Icon: Dots]	[Icon: Dots]
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV	TV/DTV
[Icon: i]	INFO

ORIGINAL	SUPERIOR
[Icon: Diamond]	EPG
PRE. CH.	FAV
[Icon: Up/Down]	[Icon: Up]
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
[Icon: Diamond]	SHIFT+POWER
I / II	SHIFT+MUTE
[Icon: X]	SHIFT+EXIT
AV1	SHIFT+1
AV2	SHIFT+2
[Icon: Question mark]	SHIFT+ [Icon: Square]
ZOOM	SHIFT+ [Icon: Hourglass]
SOUND MODE	SHIFT+ [Icon: Line graph]
PICTURE MODE	SHIFT+ [Icon: Dots]
RECALL	SHIFT+BACK

