



ORIGINAL	SUPERIOR
MUTE	MUTE
MENU	MENU
PRE / TUN	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	[DVD icon] / SOURCE
+10	-/--
DISPLAY	[Display icon]
ZOOM	[Zoom icon]
SETUP	[Setup icon]
SUBTITLE	[Subtitle icon]
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLOW	SLEEP
FM MODE	TV/DTV
TITLE	INFO
ANGLE	EPG

ORIGINAL	SUPERIOR
PROG.	FAV
EJECT	[Up arrow] / NET TV
PAUSE / STEP	[Pause icon]
STOP	[Stop icon] / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
LANGUAGE	SHIFT+MUTE
VIDEO	SHIFT+ [Video icon]
GOTO	SHIFT+ [Goto icon]
RESUME	SHIFT+ [Resume icon]
MEMO	SHIFT+ [Memo icon]
CH+	SHIFT+ P+
CH -	SHIFT+ P -
R / L	SHIFT+LEFT
N / P	SHIFT+RIGHT
REPEAT	SHIFT+BACK
A - B	SHFIT+SLEEP
FM	SHIFT+TV/DTV
AUTO	SHIFT+ [Up arrow]

