



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	 / AV
10+	-/--
GOTO	
ANGLE	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLOW	SLEEP
TV / RADIO	TV/DTV
TITLE / TEXT	INFO
EPG	EPG

[illegible]