



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
TTX / MENU	MENU
	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	/ AV
10+	-/--
DISPLAY	
SEARCH / GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLOW	SLEEP
RADIO	TV/DTV
TITLE / PBC	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
EJECT	
STOP	
REW	GREEN
PLAY / PAUSE	YELLOW
FWD	BLUE
LANGUAGE	SHIFT+MUTE
DVB	SHIFT+1
DVD	SHIFT+2
CH+	SHIFT+ P+
CH-	SHIFT+ P-
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
L / R	SHIFT+TV/DTV
A - B	SHIFT+INFO
PR. LIST	SHIFT+EPG

