



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
MIC	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
10 / 0	0
USB	 / SOURCE
10+	-/--
V – MODE	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
N / P	TV/DTV

ORIGINAL	SUPERIOR
TITLE	INFO
PROG	EPG
GO TO	FAV
OPEN / CLOSE	 / NET TV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
N / P	SHIFT+ 
ZOOM	SHIFT+ 
LANGUAGE	SHIFT+ 
REPEAT	SHIFT+BACK
SLOW	SHIFT+SLEEP
R / L	SHIFT+ TV/DTV
A – B	SHIFT+INFO
PBC	SHIFT+EPG

