



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU / BACK	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	 / SOURCE
PAL / NTSC	
VOL+	VOL+
VOL -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
← PR	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
PAUSE	
RED / AUDIO	RED

[illegible]