



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
M – P	-/--
TXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RCL	BACK
SLOW	SLEEP
TV / SAT	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / SAT	RED
GREEN /  / ZOOM	GREEN

[illegible]