



ORIGINAL	SUPERIOR
ON	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY/NAVI	
PROGRESSIVE	
SETUP	
SUBTL	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
VIDEO OFF	SLEEP
RANDOM	TV/DTV
DIMMER	INFO
MEMORY	EPG
TOP MENU	FAV
EJECT	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
STNBY	SHIFT+POWER
SEARCH	SHIFT+EXIT
ZOOM ON	SHIFT+
ANGLE	SHIFT+
ZOOM+	SHIFT+UP
ZOOM -	SHIFT+DOWN
REPEAT	SHIFT+BACK
A - B	SHIFT+FAV
◀ SLOW	SHIFT+GREEN
SLOW ▶	SHIFT+BLUE

