



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
-/--	-/--
DISPLAY	
ZOON	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
DVD / TV	TV/DTV
TITLE / PBC	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
D. MENU	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REV	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
10+	SHIFT+ -/--
PICT.	SHIFT+
SCAN	SHIFT+
SLOW	SHIFT+
CCD	SHIFT+
CH+	SHIFT+ P+
CH-	SHIFT+ P-
REPEAT	SHIFT+BACK
A – B	SHIFT+SLEEP
ANGLE	SHIFT+TV/DTV
D. CALL	SHIFT+INFO
TIME	SHIFT+EPG

