



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
GO TO	
LANG.	
TTX	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / PVR	RED
GREEN / V-FORMAT	GREEN

[illegible]