



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SAT	AV
	-/--
V. FORMAT	
MODE	
TXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
RECALL	BACK
TIMING	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
MENU	SHIFT+MENU
SUB-T.	SHIFT+
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

