



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EIXT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	 / SOURCE
-/--	-/--
	
	
	
	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
INFO	INFO
TV GUIDE	EPG
VIDEO CLUB	FAV

[illegible]