



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV/SAT	 / SOURCE
T/S	-/--
POS	
LANG	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP / CH UP	UP
DOWN / CH DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV/R	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / TTX	RED

[illegible]