



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
TOP MENU	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
GO TO	-/--
DISPLAY	
ZOOM	
ANGLE	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
ADJUST	INFO
MEMORY	EPG
SURROUND	FAV

ORIGINAL	SUPERIOR
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
INPUT AUX/TV	SHIFT+1
INPUT DIGITAL IN	SHIFT+2
INPUT DVD	SHIFT+3
INPUT TUNER	SHIFT+4
STEREO/MONO	SHIFT+ -/--
SETUP	SHIFT+
LANGUAGE	SHIFT+
SLOW REW	SHIFT+LEFT
SLOW FWD	SHIFT+RIGHT
ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
PROGRAM	SHIFT+EPG
STEP REW	SHIFT+GREEN
STEP FWD	SHIFT+BLUE

