



ORIGINAL	SUPERIOR
 / I	POWER
DVD MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	 / SOURCE
VCR	-/--
DISPLAY	
ZOOM	
SETUP MENU	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
SLOW	SLEEP
TV / VCR	TV/DTV
TITLE	INFO
MEMORY	EPG
PLAY MODE	FAV
OPEN/CLOSE	 / NET TV

