



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB/CARD	/ SOURCE
10+	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TV – MODE	TV/DTV
SEARCH	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
V – MODE	FAV
OPEN/CLOSE	/ NET TV
SLOW	
STOP	/ SMART
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
L/R	SHIFT+ -/--
SETUP	SHIFT+
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
A – B	SHIFT+ TV/DTV
TITLE	SHIFT+INFO
PBC	SHIFT+EPG
N/P	SHIFT+FAV

