



ORIGINAL	SUPERIOR
STANDBY	POWER
AUDIO	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
TIME	SLEEP
SLOW	TV/DTV
PROGRAM	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REW	GREEN

[illegible]