



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
STANDBY	POWER
AUDIO	MUTE
MENU	MENU
L / R	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	 / AV
+10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLOW	SLEEP
A-B	TV/DTV
TITLE	INFO
ANGLE	EPG
PROG.	FAV

[illegible]