



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
RADIO	-/--
VOD	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV	TV/DTV
i	INFO
EPG	EPG
FAV	FAV
PVR	/ NET TV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW / LANG.	YELLOW
BLUE	BLUE
	SHIFT+ -/--
?	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

