



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
SPEAKER	-/--
DISPLAY	
ZOOM / ATR.	
ANGLE	
SUBTITLE / TIMER	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN / A.DUB	BACK
TV / VCR	TV/DTV
INDEX / MARK	INFO
OPEN/CLOSE	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DVD	SHIFT+1
FM / AM	SHIFT+2
VCR	SHIFT+3
SCREEN FIT / SVHS	SHIFT+
SETUP	SHIFT+
TEST	SHIFT+
TRK+	SHIFT+ P+
TRK -	SHIFT+ P -
REPEAT / MODE	SHIFT+BACK
STEP	SHIFT+SLEEP
SOUND MODE	SHIFT+ TV/DTV
TITLE / SPEED	SHIFT+INFO
SOUND EFFECT	SHIFT+FAV

