



ORIGINAL	SUPERIOR
DVD STANDBY/ON	POWER
AUDIO	MUTE
[] / MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	[] / AV
TITLE LIST / DISC MENU	-/--
SHOW VIEW	[]
CM SKIP	[]
PLAY LIST / TITLE MENU	[]
SUBTITLE	[]
TV VOL+	VOL+
TV VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
[] / OK	OK
[] / RETURN	BACK
TIME SLIP	SLEEP
TV / DVD	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
ANYKEY	EPG
MARKER	FAV
OPEN / CLOSE	[]
STOP	[]
REC	RED
REW	GREEN
PLAY / PUASE	YELLOW
FWD	BLUE
PIP	SHIFT+1
PROG+	SHIFT+ P+
PROG-	SHIFT+ P-
[]	SHIFT+LEFT
[]	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
REC PAUSE	SHIFT+ []
REC MODE	SHIFT+RED

