

ORIGINAL	SUPERIOR
STANDBY / ON	POWER
TV MUTE / AUDIO	MUTE
 / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SELECT – DVD	AV
SELECT – HDD	-/--
REC MODE	
MARKER	
COPY	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
 / OK	OK
 / RETURN	BACK
TIMER	SLEEP
TV / DVD	TV/DTV
INFO	INFO
PLAYLIST / TIT. MENU	EPG
INPUT SEL.	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	
REC PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY / PAUSE	YELLOW
FWD	BLUE
PROG-	SHIFT+DOWN
PROG+	SHIFT+UP
REPEAT	SHIFT+BACK
REPEAT A-B	SHIFT+SLEEP
TIT. LIST / DISC MENU	SHIFT+EPG
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C	SHIFT+YELLOW
BLUE / D	SHIFT+BLUE
TV	
TV STANDBY/ON	SHIFT+POWER
TV MUTE / AUDIO	SHIFT+MUTE
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
INPUT SEL.	SHIFT+AV
VOL-	SHIFT+ V-
VOL+	SHIFT+ V+

[illegible]