



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
AUDIO	MUTE
III / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	AV
TITLE MENU / PLAY LIST	-/--
COPY	
TITLE LIST / DISC MENU	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
REC PAUSE / TIME SHIFT	SLEEP
TV / DVD	TV/DTV
INFO	INFO
REC MODE	EPG
MARKER	FAV
OPEN / CLOSE	

ORIGINAL	SUPERIOR
PAUSE	II
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIMER	SHIFT+POWER
DVD	SHIFT+1
HDD	SHIFT+2
PROG.+	SHIFT+ P+
PROG.-	SHIFT+ P-
REPEAT	SHIFT+BACK
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C	SHIFT+YELLOW
BLUE / D	SHIFT+BLUE

