



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	/ SOURCE
ANGLE	-/--
EZ VIEW	
ZOOM	
DISC MENU	
SBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
I.SKIP	TV/DTV
INFO	INFO
TITLE MENU	EPG
BOOKMARK	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	/ NET TV
STOP	/ SMART
REW	GREEN
PLAY / PAUSE	YELLOW
FWD	BLUE
3D	SHIFT+3
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
I.REPLAY	SHIFT+TV/DTV

