



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
[Icon] / MENU	MENU
[Icon] / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
[Icon] / SOURCE	[Icon] / SOURCE
SELECT USB	-/--
TITLE LIST DISC MENU	[Icon]
COPY	[Icon]
SUBTITLE	[Icon]
TXT	[Icon]
PROG+	P+
PROG -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
[Icon] / OK	OK
[Icon] / RETURN	BACK
DTV / ANALOG	TV/DTV
INFO	INFO
GUIDE	EPG
FAV LIST	FAV
EJECT	[Icon] / NET TV

ORIGINAL	SUPERIOR
PAUSE	[Icon]
STOP	[Icon] / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIMER	SHIFT+POWER
DVD	SHIFT+1
HDD	SHIFT+2
DVD	SHIFT+3
PLAY LIST TITLE MENU	SHIFT+ [Icon]
REC MODE	SHIFT+ [Icon]
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
RADIO	SHIFT+TV/DTV
REC PAUSE	SHIFT+ [Icon]
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

