



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TEXT	
	VOL+
	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
i	INFO
EPG	EPG
RED / FAV	RED
GREEN / PIP	GREEN
YELLOW / OPT.	YELLOW
BLUE / TV/R.	BLUE
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED

[illegible]