



ORIGINAL	SUPERIOR
RECEIVER ON	POWER
MUTE	MUTE
MENU	MENU
STRAIGHT DECODE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY	
ACTIVE EQ	
SETUP	
ON SCREEN/AUTO MEM	
VOLUME+	VOL+
VOLUME -	VOL -
TUNING+	P+
TUNING -	P -
MULTI CONTROL ▲	UP
MULTI CONTROL ▼	DOWN
MULTI CONTROL ◀	LEFT
MULTI CONTROL ▶	RIGHT
PURE AUDIO MODE	OK
RETURN	BACK
TIME	SLEEP
AUTO/MONO	TV/DTV
DIMMER	INFO
MEMORY	EPG

ORIGINAL	SUPERIOR
TOP MENU	FAV
BAND	RED
BASS BOOST	GREEN
SOUND	YELLOW
tone	BLUE
RECEIVER STANDBY	SHIFT+POWER
AUDIO/PTY	SHIFT+MUTE
AUX	SHIFT+1
AV AUX	SHIFT+2
CD	SHIFT+3
DVD	SHIFT+4
IPOD	SHIFT+5
MD/TAPE	SHIFT+6
TUNER	SHIFT+7
VIDEO 1	SHIFT+8
VIDEO 2	SHIFT+9
< LISTE MODE	SHIFT+LEFT
LISTEN MODE >	SHIFT+RIGHT

