



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
10+	-/--
100+	SHIFT+ -/--
ON SCREEN	
BASS BOOST	
CINE EQ.	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP RIGHT	P+
SKIP LEFT	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CLEAR	BACK
STEP	SLEEP
PTY	EPG
LISTEN MODE	FAV

ORIGINAL	SUPERIOR
AUTO/MONO	/ NET TV
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SOUND	SHIFT+MUTE
TOP MENU	SHIFT+MENU
INPUT MODE	SHIFT+1
INPUT DVD/CD	SHIFT+2
INPUT AV/AUX	SHIFT+3
INPUT SAT	SHIFT+4
BAND / INPUT TUNER	SHIFT+5
INPUT VCR	SHIFT+6
REAR / CENTER	SHIFT+7/8
FRONT/SUB-WOOFER	SHIFT+9/0
TUNE DOWN/UP	SHIFT+DOWN/UP
PRESET PREV./NEXT	SHIFT+LEFT/RIGHT
TRIM DOWN/UP	SHIFT+ P- / +
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
SLOW	SHIFT+

