



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / PTY	MENU
CLEAR / +10	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT MODE / RANDOM	/ AV
PGM / +100	-/--
DISPLAY	
SW	
SETUP/ACTIVE EQ/SOND	
S.TITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV.	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
TV	TV/DTV
ON SCREEN	INFO

ORIGINAL	SUPERIOR
LISTE MODE	EPG
TOP MENU / P.B.C.	FAV
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DVD / CD	SHIFT+1
TUNER / BAND	SHIFT+2
SAT	SHIFT+3
VCR	SHIFT+4
CABLE	SHIFT+5
FRONT /AUX	SHIFT+6
PRESET	SHIFT+ -/--
CENTER	SHIFT+
REAR	SHIFT+
SLOW	SHIFT+
FRONT	SHIFT+
TRIM +/-	SHIFT+ VOL+/-
CH +/-	SHIFT+ P+/-
REPEAT	SHIFT+BACK
A.B	SHIFT+SLEEP
AUTO / MONO	SHIFT+TV/DTV

