



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD / USB / DVB-T	AV
10+	-/--
DISPLAY	
ZOOM	
ANGLE	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV.	P-
UP / CH+	UP
DOWN / CH-	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
GUIDE	EPG
MODE	FAV
EJECT	
PAUSE	
STOP	

[illegible]