



KRAFTCOM	SUPERIOR	LG	SUPERIOR
 X	MUTE		POWER
MENU	MENU		
EXIT	EXIT		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
TV	TV/AV		
 / SETUP			
EPG / GUIDE			
VOLUME -/+	VOL -/+		
CHANNEL -/+	P -/+		
UP	UP		
DOWN	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK	OK		
BACK	BACK		
INFO	INFO		
EPG / GUIDE	EPG		
FAV	FAV		
 / DEL.			
RED / F1	RED		
GREEN / F2	GREEN		
YELLOW / F3	YELLOW		
BLUE / F4	BLUE		

