



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
EDIT	-/--
OSD	
ZOOM	
SETUP	
SUBTITLE	
VOLUME+	VOL+
VOLUME-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
REPEAT	BACK
TIMER	SLEEP
DVD	TV/DTV
TITLE	INFO
PROG.	EPG
BOOK MARK	FAV

ORIGINAL	SUPERIOR
EJECT	
PAUSE / STEP	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DISC	SHIFT+ -/--
V. MODE	SHIFT+
ANGLE	SHIFT+
CH-	SHIFT+ P-
CH+	SHIFT+ P+
A-B RPT.	SHIFT+BACK
N / P	SHIFT+ TV/DTV
INTRO	SHIFT+INFO
QUALITY	SHIFT+EPG
CHAP. MARK	SHIFT+FAV
SLOW - 	SHIFT+GREEN
SLOW - 	SHIFT+BLUE

