



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
/ V-FORMAT	-/--
/ P.MODE	
/ AUDIO	
/ SLEEP	
/ TEXT	
VOL+	VOL+
VOL-	VOL-
CH+ / PAGE UP	P+
CH- / PAGE DOWN	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
BACK	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
OPT.	SHIFT+MENU
MEDIA	SHIFT+6
/ PIP	SHIFT+
/ S. MODE	SHIFT+
/ SUB.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

