



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
XTS PRO	-/--
DISPLAY	
ZOOM	
SETUP	
/ SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP+	P+
SKIP -	P -
UP / PRESET+	UP
DOWN / PRESET -	DOWN
LEFT / TUN -	LEFT
RIGHT / TUN+	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
PTY/HDMI	TV/DTV
TITLE	INFO
PROG/MEMO	EPG

ORIGINAL	SUPERIOR
MARKER	FAV
OPEN/CLOSE	/ NET TV
PAUSE/STEP	/ SMART TUBE
STOP	/ SMART VIDEO
REW/SCAN -	GREEN
PLAY	YELLOW
FWD/SCAN+	BLUE
/ AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
AUX	SHIFT+1
BAND	SHIFT+2
DVD	SHIFT+3
USB	SHIFT+4
REPEAT	SHIFT+BACK
SOUND	SHIFT+SLEEP
RDS/RESOL	SHIFT+TV/DTV
DIMMER	SHIFT+INFO
VIRTUAL	SHIFT+EPG
REPEAT A - B	SHFIT+FAV

