



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
CM SKIP / RANDOM	-/--
DISPLAY / CLK/CNT	
ZOOM	
ANGLE	
/ S - TITLE	
VOLUME+	VOL+
VOLUME -	VOL -
PR/TRK/PRESET+	P+
PR/TRK/PRESET -	P -
UP	UP
DOWN	DOWN
LEFT / TUNING -	LEFT
RIGHT / TUNING+	RIGHT
OK / MEMORY / ENTER	OK
/ RETURN	BACK
TV / VCR	TV/DTV
MARKER	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
SEARCH	FAV
EJECT	/ NET TV
PAUSE / STEP	
STOP	/ SMART
REC / ITR.	RED
BACKWARD	GREEN
PLAY	YELLOW
FORWARD	BLUE
/ AUDIO	SHIFT+MUTE
CD / DVD	SHIFT+1
FM / AM	SHIFT+2
VCR	SHIFT+3
SHOW VIEW	SHIFT+
SET UP / i	SHIFT+
RDS	SHIFT+
REPEAT	SHIFT+BACK
REPEAT A-B / SPEED	SHIFT+SLEEP
SOUND MODE	SHIFT+ TV/DTV
TITLE	SHIFT+INFO

