



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PTY	-/--
DISPLAY	
ZOOM	
SETUP	
/ SUBTITLE	
VOLUME+/-	VOL+/-
SKIP NEXT/PREV	P+/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER/SELECT	OK
/ RETURN	BACK
SLEEP	SLEEP
RDS	TV/DTV
DIMMER	INFO
PROG/MEMO	EPG
MARKER	FAV
PAUSE/STEP	

ORIGINAL	SUPERIOR
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
/ AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
AUX	SHIFT+1
DVD	SHIFT+2
TUNER/BAND	SHIFT+3
USB	SHIFT+4
DISP MODE	SHIFT+
SOUND MODE	SHIFT+
EQ MASTER	SHIFT+
VSM	SHIFT+
ECHO VOL+	SHIFT+UP
ECHO VOL -	SHIFT+DOWN
MIC VOL -	SHIFT+LEFT
MIC VOL+	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A - B	SHIFT+SLEEP
TITLE	SHIFT+INFO
XDSS Plus	SHIFT+EPG
XTS pro	SHIFT+FAV
SLOW -	SHIFT+GREEN
SLOW+	SHIFT+BLUE

