



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / LIST	MENU
SEARCH	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT	/ AV
DVD	-/--
DISPLAY	
ZOOM	
SETUP	
/ SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER / MEMORY	OK
/ RETURN	BACK
SLEEP	SLEEP
BY-PASS	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
DELAY	EPG
MARKER	FAV
OPEN / CLOSE	
PAUSE / STEP	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO / MO/ST	SHIFT+MUTE
TEST TONE	SHIFT+
LEVEL	SHIFT+
CH / PR+	SHIFT+ P+
CH / PR-	SHIFT+ P-
REPEAT	SHIFT+BACK
REPEAT A-B	SHIFT+SLEEP

