



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VIDEO 1	/ SOURCE
FM/AM	-/--
DISPLAY	
ZOOM	
ANGLE	
S – TITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
CD/DVD	TV/DTV
MARKER	INFO

ORIGINAL	SUPERIOR
PROG.	EPG
SEARCH	FAV
PAUSE/STEP	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SET – UP	SHIFT+MENU
TEST TONE	SHIFT+1
SOUND MODE	SHIFT+2
BY PASS	SHIFT+3
LEVEL	SHIFT+4
VIDEO 2	SHIFT+
TITLE	SHIFT+
PRESET UP	SHIFT+UP
PRESET PREV	SHIFT+DOWN
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
DELAY	SHIFT+

