



ORIGINAL	SUPERIOR
POWER	POWER
⦿ / AUDIO	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	📺 / SOURCE
RANDOM	-/--
DISPLAY	📺
ZOOM	📺
SETUP	📺
⦿ / SUBTITLE	📺
SKIP NEXT	P+
SKIP PREV	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
🔊 / RETURN	BACK
📺 / ANGLE	TV/DTV
TITLE	INFO
PROGRAM	EPG
MARKER	FAV
OPEN / CLOSE	⬆ / NET TV

ORIGINAL	SUPERIOR
PAUSE / STEP	⏸
STOP	⏹ / SMART
BACKWARD	GREEN
PLAY	YELLOW
FORWARD	BLUE
SEARCH	SHIFT+EXIT
DVD	SHIFT+1
VCR	SHIFT+2
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
TV	
POWER	SHIFT+POWER
MUTE	SHIFT+MUTE
AV	SHIFT+📺
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -
PR+	SHIFT+ P+
PR -	SHIFT+ P -

