



ORIGINAL	SUPERIOR
POWER	POWER
⏻ / AUDIO	MUTE
MENU / LIST	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	📺 / SOURCE
CHP. ADD	-/--
DISPLAY	📺
ZOOM	📺
SETUP	📺
⋮ / SUBTITLE	📺
SKIP NEXT	P+
SKIP PREV	P-
UP / PR+	UP
DOWN / PR-	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TIMER REC.	SLEEP
TV / DVD	TV/DTV
TITLE	INFO
SEARCH	EPG
MARKER	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	⬆️ / NET TV
PAUSE / STEP	⏸️
STOP	⏹️ / SMART
REC	RED
SCAN REW	GREEN
PLAY	YELLOW
SCAN FWD	BLUE
PIP	SHIFT+1
*	SHIFT+2
I. SKIP	SHIFT+RIGHT
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
THUMBNAIL	SHIFT+EPG
REC. MODE	SHIFT+RED
TV	
POWER	SHIFT+POWER
AV	SHIFT+📺
VOL+	SHIFT+VOL+
VOL-	SHIFT+VOL-
PR+	SHIFT+P+
PR-	SHIFT+P-

