



ORIGINAL	SUPERIOR
POWER	POWER
/ AUDIO	MUTE
/ HOME	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT	/ SOURCE
LIST / DISC MENU	-/--
DISPLAY	
ZOOM	
SHOWVIEW	
/ SUBTITLE	
*	VOL+
*	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
... / RETURN	BACK
THUMBNAIL	SLEEP
TV/VCR	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
CHP ADD	EPG
MARKER	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SEARCH	SHIFT+EXIT
DVD	SHIFT+1
VCR	SHIFT+2
I.SKIP	SHIFT+BACK
DUBBING	SHIFT+INFO
REC MODE	SHIFT+RED
PLAY MODE	SHIFT+YELLOW

